

# FREESTYLE WAVE

PowerBox			PRO EDITION					EPOXY SANDWICH				
			78	84	94	104	114	78	84	94	104	114
Size	Length	Area (cm2)	<6.2	4.0-6.5	4.5-6.7	4.7-6.9	5.0-7.2	<6.2	4.0-6.5	4.5-6.7	4.7-6.9	5.0-7.2
FREESTYLE WAVE (G10 CNC)			THRUSTER SET-UP use with side fins					SINGLE FIN use without side fins				
21	8.3"	182	4.0-5.8	<5.6	<5.0	<5.0		<5.4	<5.0	<4.7		
23	9.0"	206	5.0-6.2	4.4-6.0	<5.8	<5.8	<5.6	4.0-5.8	<5.6	<5.0	<5.0	
25	9.8"	230	5.8-6.2	5.0-6.5	4.7-6.2	4.7-6.2	5.0-5.8	5.0-6.2	4.4-6.0	4.5-5.8	<5.8	<5.8
27	10.6"	254		5.8-6.5	5.2-6.7	5.0-6.5	5.0-6.2	5.8-6.2	5.0-6.5	4.7-6.2	4.7-6.2	<6.2
29	11.4"	279			6.0-6.7	5.4-6.7	5.4-6.9		5.8-6.5	5.2-6.7	5.0-6.5	5.0-6.7
RIDE (G10 CNC)			THRUSTER SET-UP use with side fins					SINGLE FIN use without side fins				
32	12.6"	297				>6.7	>6.5			6.0-6.7	5.8-6.9	5.0-7.0
34	13.4"	322								>6.5	>6.5	5.2-7.2
36	14.2"	353								>6.7	>6.5	
WEED WAVE (G10 CNC)			THRUSTER SET-UP use with side fins					SINGLE FIN use without side fins				
21	8.3"	245						<6.2	<6.2	<6.0	<6.0	<6.0
23	9.0"	268						4.7-6.5	4.7-6.5	4.7-6.5	4.7-6.5	5.0-6.5
26	10.2"	309							6.0-6.5	6.0-6.7	5.4-6.9	5.4-7.2

Boards come with: 1x main fin (yellow) + 2x Mini Tuttle Box covers. PRO models come with 2 additional side fins.

Freeride (no Side Fins): a 2cm bigger main fin covers a ~similar wind range compared to use with side fins