
UNIVERSAL NOSE PROTECTOR

Made of EVA, the **JP Universal Nose Protector** is a very light and strong protection. It is easy to handle as it is simply glued to the nose.

The set consists of 3 pieces: 2x side parts (one Left and one Right) and 1x middle part.

By combining the two sides with the middle part, noses of all board sizes and shapes can be covered efficiently.

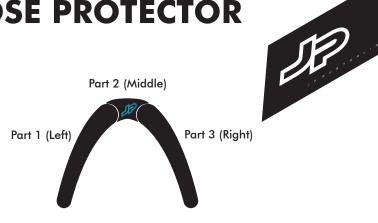

Construction:

The hard top plastic prevents scratches and spreads the load to the middle layers, consisting of high density to low density EVA, in order to absorb the impact and to protect the board.

PVC Hard Plastic 2mm
EVA Black / 5mm [hard]
EVA 312 C / 10mm [medium]
EVA Black / 4mm [soft]

MOUNTING INSTRUCTIONS:

a. Prepare the materials:

- Adhesive (glue):

Contact glue (e.g. Pattex Classic), Epoxy based 2K glues (e.g. UHU plus), Super Glue (e.g. Loctite), or any water prove and UV-stable power adhesives (read the instruction of the glue carefully to ensure it works)

- Tape
- Pencil
- Squeegee
- Sandpaper (80-100)
- Protective gloves
- Cleaning material

b. How to adjust the right size:

The nose protector shall be positioned as close to the outline (rail) of the board as possible. The middle part needs to be positioned in the middle of the board nose, the left and right part can be adjusted by turning them into the right position (parallel along the outline of the board). If needed, you can add the extension parts in order to enlarge the nose protector for bigger boards.

Mark the right position of the protector on the board with a pencil.

c. How to fix the Nose Protector:

The surface of board and protector shall be dry and free of any oil and dust. Clean with standard commercial substances (e.g. white spirit) and sand the surfaces if necessary.

Read and follow the instruction of the used adhesive carefully.

Apply the adhesive in the marked area and if requested as well onto the nose protector parts (e.g. with Pattex). Put the Nose Protector into position and press firmly. Fix it firmly with tape until the glue is totally dry. Remove the tape.

